

<b>EUROMAP 82.3</b>	<b>OPC UA for LSR Dosing Systems</b>
---------------------	--------------------------------------

Release 1.02.0, 01 April 2024

**EUROMAP 82.3 (Release 1.02.0) is identical with  
OPC 40082-3 (Release 1.02.0) and VDMA 40082-3:2025-04**

## Contents

	Page
Foreword.....	8
<b>1 Scope .....</b>	<b>10</b>
<b>2 Normative references .....</b>	<b>10</b>
<b>3 Terms, definitions and conventions .....</b>	<b>10</b>
3.1 Overview .....	10
3.2 Conventions used in this document.....	10
3.3 Abbreviations .....	11
<b>4 General information to OPC UA interfaces for plastics and rubber machinery and OPC UA ....</b>	<b>11</b>
<b>5 Use cases .....</b>	<b>11</b>
<b>6 LDS_InterfaceType .....</b>	<b>12</b>
6.1 LDS_InterfaceType Definition .....	12
6.2 DisplayLanguage .....	13
6.3 DeviceEnabled .....	13
<b>7 Identification .....</b>	<b>13</b>
<b>8 MachineConfiguration.....</b>	<b>13</b>
<b>9 OperationType .....</b>	<b>14</b>
9.1 DeviceMappingNumber.....	15
9.2 IdentifyDevice .....	15
9.3 HighestActiveAlarmSeverity.....	15
9.4 ActiveErrors .....	15
9.5 ResetAllErrors.....	16
9.6 ResetErrorById .....	17
9.7 SetCycleNumber .....	17
9.8 MaterialBalanceSystemType .....	17
9.9 ActivateMaterialBalanceSystem .....	17
9.10 DeliveryType .....	18
9.11 DeliveryPressure, DeliveryPressureMeasuringPoint.....	18
9.12 DeliveryFlowrate .....	18
9.13 ActualShotWeight.....	18
9.14 SetShotWeight .....	18
9.15 SetValueCompositeDensity .....	18
9.16 MixingRatioTarget .....	19
9.17 MaxDeviationMixingRatio, TargetDeviationMixingRatio, ActualDeviationMixingRatio .....	19
9.18 RemainingMaterialTime .....	19
9.19 PurgeMode .....	20

9.20	PurgeStatus .....	20
9.21	PurgeQuantity .....	21
9.22	PurgeTimeout .....	21
9.23	PurgeCyclicQuantity .....	21
9.24	PurgeCyclicIdleTime .....	21
9.25	PurgeCyclicActive .....	21
9.26	ActivateRemoteControl.....	22
9.27	RemoteControlActivated .....	22
9.28	StartDosing, StopDosing, DosingActive.....	22
9.29	LDSCycleParametersEventType .....	23
10	ComponentType .....	25
10.1	SetValueDensity .....	26
10.2	SetSetValueDensity .....	26
10.3	ActualPressure .....	26
10.4	ActualFollowerPlatePressure.....	26
10.5	SetFollowerPlatePressure .....	26
10.6	DrumCapacity .....	26
10.7	ResidualAmount .....	26
10.8	RemainingMaterialTime .....	26
10.9	AllowsCycles .....	26
10.10	Status.....	27
11	AdditiveType .....	27
11.1	IsPresent .....	27
11.2	ActivateAdditive .....	27
11.3	AdditiveActivated .....	27
11.4	Status.....	28
11.5	AdditiveFraction .....	28
11.6	AdditiveStrokeVolume .....	28
11.7	ActivateClosedLoopControl .....	28
11.8	ClosedLoopControlActivated.....	28
12	Alarmmanagement .....	28
12.1	ComponentAlarmType .....	28
12.2	AdditiveAlarmType .....	29
13	Profiles and Conformance Units.....	29
13.1	Conformance Units .....	29
13.2	Profiles .....	30
14	Namespaces.....	32
14.1	Namespace Metadata .....	32
14.2	Handling of OPC UA Namespaces.....	32

**Annex A (normative) OPC 40082-3 Namespace and mappings ..... 34**

## Figures

Figure 1: LDS Tandem operation .....	11
Figure 2 – LDS_InterfaceType Overview .....	12
Figure 3 – Purge Scenario.....	20
Figure 4 – Timing of LDSCycleParametersEventType .....	23

## Tables

Table 1 - Tandem operation information .....	11
Table 2 – LDS_InterfaceType Definition .....	12
Table 3 – OperationType Definition.....	14
Table 4 – IdentifyDevice Method AddressSpace Definition .....	15
Table 5 – ResetAllErrors Method AddressSpace Definition.....	16
Table 6 – ResetErrorById Method Arguments .....	17
Table 7 – ResetErrorById Method AddressSpace Definition .....	17
Table 8 – SetCycleNumber Method Arguments.....	17
Table 9 – SetCycleNumber Method AddressSpace Definition.....	17
Table 10 – MaterialBalanceSystemTypeEnumeration .....	17
Table 11 – Values for DeliveryType .....	18
Table 12 – Values for PressureMeasuringPoint.....	18
Table 13 – Values for PurgeMode.....	20
Table 14 – PurgeStatusEnumeration .....	21
Table 15 – Values for ActivateRemoteControl and RemoteControlActivated .....	22
Table 16 – StartDosing Method AddressSpace Definition .....	22
Table 17 – StopDosing Method AddressSpace Definition .....	22
Table 18 – LDSCycleParametersEventType Definition .....	23
Table 19 – ComponentType Definition.....	25
Table 20 – SetSetValueDensity Method Arguments.....	26
Table 21 – SetSetValueDensity Method AddressSpace Definition.....	26
Table 22 – ComponentStatusEnumeration .....	27
Table 23 – AdditiveType Definition.....	27
Table 24 – AdditiveStatusEnumeration .....	28
Table 25 – ComponentAlarmType Definition .....	29
Table 26 – AdditiveAlarmType Definition .....	29
Table 27 – Conformance Units for OPC 40082-3 .....	30
Table 28 – Profile URIs for OPC 40082-3.....	31
Table 29 - OPC 40082-3 Basic Server Profile.....	31
Table 30 - OPC 40082-3 Alarms Server Facet .....	32
Table 31 – NamespaceMetadata Object for this Specification .....	32
Table 32 – Namespaces used in an OPC 40082-3 Server.....	33
Table 33 – Namespaces used in this specification .....	33

## OPC Foundation / EUROMAP

---

### AGREEMENT OF USE

#### COPYRIGHT RESTRICTIONS

- This document is provided "as is" by the OPC Foundation and EUROMAP.
- Right of use for this specification is restricted to this specification and does not grant rights of use for referred documents.
- Right of use for this specification will be granted without cost.
- This document may be distributed through computer systems, printed or copied as long as the content remains unchanged and the document is not modified.
- OPC Foundation and EUROMAP do not guarantee usability for any purpose and shall not be made liable for any case using the content of this document.
- The user of the document agrees to indemnify OPC Foundation and EUROMAP and their officers, directors and agents harmless from all demands, claims, actions, losses, damages (including damages from personal injuries), costs and expenses (including attorneys' fees) which are in any way related to activities associated with its use of content from this specification.
- The document shall not be used in conjunction with company advertising, shall not be sold or licensed to any party.
- The intellectual property and copyright is solely owned by the OPC Foundation and EUROMAP.

#### PATENTS

The attention of adopters is directed to the possibility that compliance with or adoption of OPC or EUROMAP specifications may require use of an invention covered by patent rights. OPC Foundation or EUROMAP shall not be responsible for identifying patents for which a license may be required by any OPC or EUROMAP specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. OPC or EUROMAP specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

#### WARRANTY AND LIABILITY DISCLAIMERS

WHILE THIS PUBLICATION IS BELIEVED TO BE ACCURATE, IT IS PROVIDED "AS IS" AND MAY CONTAIN ERRORS OR MISPRINTS. THE OPC FOUNDATION NOR EUROMAP MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH REGARD TO THIS PUBLICATION, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO EVENT SHALL THE OPC FOUNDATION NOR EUROMAP BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, RELIANCE OR COVER DAMAGES, INCLUDING LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY ANY USER OR ANY THIRD PARTY IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The entire risk as to the quality and performance of software developed using this specification is borne by you.

#### RESTRICTED RIGHTS LEGEND

This Specification is provided with Restricted Rights. Use, duplication or disclosure by the U.S. government is subject to restrictions as set forth in (a) this Agreement pursuant to DFARs 227.7202-3(a); (b) subparagraph (c)(1)(i) of the Rights in Technical Data and Computer Software clause at DFARs 252.227-7013; or (c) the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 subdivision (c)(1) and (2), as applicable. Contractor / manufacturer are the OPC Foundation, 16101 N. 82nd Street, Suite 3B, Scottsdale, AZ, 85260-1830

#### COMPLIANCE

The combination of EUROMAP and OPC Foundation shall at all times be the sole entities that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with these materials as specified within this document. Products developed using this specification may claim compliance or conformance with this specification if and only if the software satisfactorily meets the certification requirements set by EUROMAP or the OPC Foundation. Products that do not meet these requirements may claim only that the product was based on this specification and must not claim compliance or conformance with this specification.

#### TRADEMARKS

Most computer and software brand names have trademarks or registered trademarks. The individual trademarks have not been listed here.

#### GENERAL PROVISIONS

Should any provision of this Agreement be held to be void, invalid, unenforceable or illegal by a court, the validity and enforceability of the other provisions shall not be affected thereby.

This Agreement shall be governed by and construed under the laws of Germany.

This Agreement embodies the entire understanding between the parties with respect to, and supersedes any prior understanding or agreement (oral or written) relating to, this specification.

## Foreword

This specification was created by a joint working group of the OPC Foundation and EUROMAP. It is adopted identically as VDMA Specification.

Compared with the previous version, the following changes have been made:

Version	Changes
OPC 40082-3, version 1.00.1 (identical with VDMA 40082-3:2021-09 and EUROMAP 82-3, version 1.00.1)	NodeSet corrected (falsely used ModellingRule mandatory for Variables ActivateClosedLoopControl and ClosedLoopControlActivated in ObjectType AdditiveType) → corrected to be aligned with document → new NamespaceVersion and NamespacePublicationDate (see Mantis ID 7037)
OPC 40082-3, 1.02 (identical with VDMA 40082-3:2025-04 and EUROMAP 82-3, version 1.02)	<p>In OperationType optional <i>Variable DosingActive</i> added</p> <p>In Use cases:</p> <ul style="list-style-type: none"> <li>- Added information about the handling of tandem operation with multiple dosing systems.</li> </ul> <p>In <i>OperationType</i> :</p> <ul style="list-style-type: none"> <li>- Changes in the description of <i>PurgeMode</i> to cover purging in manual mode or purging via hard-wired dosing signal while in remote control. Added figure.</li> <li>- Added optional variables <i>PurgeQuantity</i>, <i>PurgeTimeout</i>, <i>PurgeCyclicQuantity</i>, <i>PurgeCyclicIdleTime</i>, <i>PurgeCyclicActive</i></li> <li>- In the description of <i>ActivateRemoteControl</i>: added, that value&gt;0 can only be set by IMM</li> <li>- Added Description for variable <i>DosingActive</i></li> </ul> <p>In <i>LDSCycleParameterEventType</i>:</p> <ul style="list-style-type: none"> <li>- Added description to trigger the event of the last cycle</li> <li>- Added note that event data has 1 cycle offset</li> </ul> <p>In <i>ComponentType</i></p> <ul style="list-style-type: none"> <li>- optional Variables <i>ActualFollowerPlatePressure</i>, <i>ActualFollowerPlatePressure</i> and <i>DrumCapacity</i> added</li> <li>- description of <i>ActualPressure</i> clarified</li> </ul>

## EUROMAP

EUROMAP is the European umbrella association of the plastics and rubber machinery industry which accounts for annual sales of around 13.5 billion euro and a 40 per cent share of worldwide production. Almost 75 per cent of its European output is shipped to worldwide destinations. With global exports of 10.0 billion euro, EUROMAP's around 1,000 machinery manufacturers are market leaders with nearly half of all machines sold being supplied by EUROMAP members.

EUROMAP provides technical recommendations for plastics and rubber machines. In addition to standards for machine descriptions, dimensions and energy measurement, interfaces between machines feature prominently. The provision of manufacturer independent interfaces ensures high levels of machine compatibility.

## OPC Foundation

OPC is the interoperability standard for the secure and reliable exchange of data and information in the industrial automation space and in other industries. It is platform independent and ensures the seamless flow of information among devices from multiple vendors. The OPC Foundation is responsible for the development and maintenance of this standard.

OPC UA is a platform independent service-oriented architecture that integrates all the functionality of the individual OPC Classic specifications into one extensible framework. This multi-layered approach accomplishes the original design specification goals of:



- Platform independence: from an embedded microcontroller to cloud-based infrastructure
- Secure: encryption, authentication, authorization and auditing
- Extensible: ability to add new features including transports without affecting existing applications
- Comprehensive information modelling capabilities: for defining any model from simple to complex

## 1 Scope

OPC 40082-3 describes the interface between injection moulding machines (IMM) and liquid silicone rubber (LSR) dosing systems for data exchange via OPC UA. The target of OPC 40082-3 is to provide a standardised interface for IMM and LSR dosing system from different manufacturers to ensure compatibility.

The following functionalities are covered:

- General information about the LSR dosing systems
- Status information
- Process data

Synchronisation of dosing between IMM and LSR dosing systems is not part of OPC 40082-3 and must be done by additional interfaces e.g. via hardwired signals.

Safety related signals like emergency stop are not included.

## 2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies

OPC 10000-3, *OPC Unified Architecture - Part 3: Address Space Model*

<http://www.opcfoundation.org/UA/Part3/>

OPC 10000-5, *OPC Unified Architecture - Part 5: Information Model*

<http://www.opcfoundation.org/UA/Part5/>

OPC 10000-6, *OPC Unified Architecture - Part 6: Mappings*

<http://www.opcfoundation.org/UA/Part6/>

OPC 10000-7, *OPC Unified Architecture - Part 7: Profiles*

<http://www.opcfoundation.org/UA/Part7/>

OPC 10000-8, *OPC Unified Architecture - Part 8: Data Access*

<http://www.opcfoundation.org/UA/Part8/>

OPC 10000-9, *OPC Unified Architecture - Part 9: Alarms and Conditions*

<http://www.opcfoundation.org/UA/Part9/>

OPC 10000-100, *OPC Unified Architecture - Part 100: Devices*

<http://www.opcfoundation.org/UA/Part100/>

OPC 40083: OPC UA interfaces for plastics and rubber machinery – General Type definitions

<http://www.opcfoundation.org/UA/PlasticsRubber/GeneralTypes>

## 3 Terms, definitions and conventions

### 3.1 Overview

It is assumed that basic concepts of OPC UA information modelling are understood in this specification. This specification will use these concepts to describe the OPC 40082-3 Information Model. For the purposes of this document, the terms and definitions given in the documents referenced in Clause 2 apply.

Note that OPC UA terms and terms defined in this specification are *italicized* in the specification.

### 3.2 Conventions used in this document

The conventions described in OPC 40083 apply.

### 3.3 Abbreviations

- IMM injection moulding machine
- LSR liquid silicone rubber
- LDS LSR dosing system

## 4 General information to OPC UA interfaces for plastics and rubber machinery and OPC UA

For general information on OPC UA interfaces for plastics and rubber machinery and OPC UA see OPC 40083.

## 5 Use cases

OPC 40082-3 covers the following functionalities:

- General information about the LSR dosing system
- Status information
- Process data

If multiple LDS are operated alternately on one machine for the same injection unit (see Figure 1), one system must act as the Master. This Master provides the regular OPC UA server. The Master server always provides the data of the active system in the network. The direct operation of several LDS servers between machines and LDS is not scope of this specification.

More information is listed in Table 1.

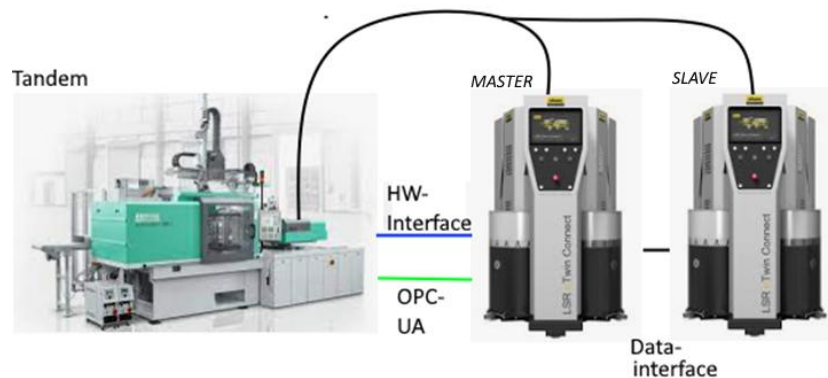


Figure 1: LDS Tandem operation

Table 1 - Tandem operation information

OPC UA Server (Master)	Data Master	Data Slave
DisplayLanguage	Basically Master	
Identification	Basically Master	
MachineConfiguration	Basically Master	
Operation	Always the data from the active system/last active system	
Events	Always the events from the active system/last active system	

## 6 LDS\_InterfaceType

### 6.1 LDS\_InterfaceType Definition

This OPC UA *ObjectType* is used for the root *Object* representing an LSR dosing system with its subcomponents. It is formally defined in Table 2.

NOTE: To promote interoperability of *Clients* and *Servers*, all instantiated *Devices* shall be aggregated in an *Object* called "DeviceSet" (see OPC UA for Devices)

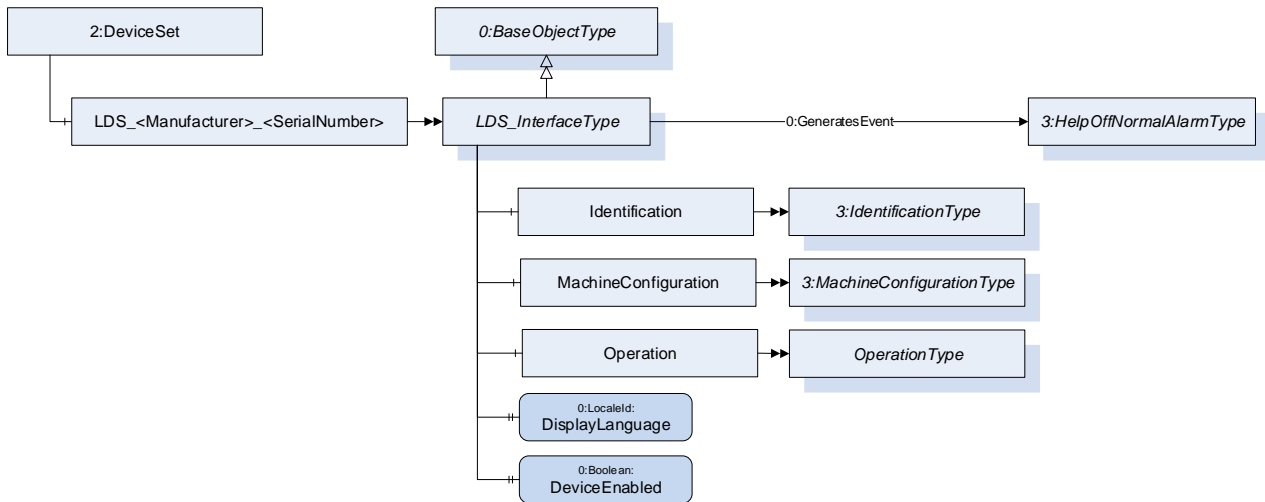


Figure 2 – LDS\_InterfaceType Overview

Table 2 – LDS\_InterfaceType Definition

Attribute	Value				
BrowseName	LDS_InterfaceType				
IsAbstract	False				
References	Node Class	BrowseName	Data Type	Type Definition	Other
Subtype of 0:BaseObjectType defined in OPC UA Part 5					
0:HasComponent	Object	Identification		3:IdentificationType	M
0:HasComponent	Object	MachineConfiguration		3:MachineConfigurationType	M
0:HasComponent	Object	Operation		OperationType	M
0:HasProperty	Variable	DisplayLanguage	0:LocaleId	0:PropertyType	O, RW
0:HasProperty	Variable	DeviceEnabled	0:Boolean	0:PropertyType	O, RW
0:GeneratesEvent	ObjectType	0:HelpOffNormalAlarmType	Defined in OPC 40083		
Conformance Units					
OPC 40082-3 Basic					

The *BrowseName* of the object instance shall be "LDS\_<Manufacturer>\_<SerialNumber>"

Example: "LDS\_Reinhardt\_0123456".

NOTE: The namespace of this *BrowseName* is the local server URI with namespace index 1 or a vendor specific namespace with server specific namespace index (see Table 32). The *BrowseNames* of the nodes below are in the namespace of the specification where used *Type* is defined.

Example:

BrowseName	Namespace	Namespace index	Remarks
LDS_Reinhardt_0123456	Local Server URI or vendor specific namespace	1 or server specific	OPC 40082-3 only defines the <i>LDS_InterfaceType</i> . The instance is generated in the local server
↓			
Identification	http://opcfoundation.org/UA/PlasticsRubber/LDS/	server specific	The object <i>Identification</i> is a child of <i>LDS_InterfaceType</i> which is defined in OPC 40082-3
↓			
Manufacturer	http://opcfoundation.org/UA/DI/	server specific	The variable <i>Manufacturer</i> is a child of <i>IdentificationType</i> which is defined in OPC 40083. However, it derives from the <i>ComponentType</i> defined in OPC 10000-100. The Variable <i>Manufacturer</i> is defined there.

## 6.2 DisplayLanguage

With the *DisplayLanguage Property* the client can set the desired language on the user interface at the LDS. If the peripheral device does not support the configured language, it can keep the previous setting or use English as the default.

## 6.3 DeviceEnabled

The variable *DeviceEnabled* is used to release the drives of the dosing system. If the value is FALSE, the LDS shall not be able to start its drives.

## 7 Identification

The *IdentificationType* for the identification of the device is defined in OPC 40083. All mandatory nodes shall be filled with valid values from the server.

The *DeviceClass Property* in the *Identification Object* shall have the value "LSR Dosing System"

## 8 MachineConfiguration

The *MachineConfiguration Object* represents the current configuration of the LDS. The *MachineConfigurationType* is defined in OPC 40083.

## 9 OperationType

This *ObjectType* contains components which are necessary to operate the LDS. It is formally defined in Table 3.

**Table 3 – OperationType Definition**

Attribute	Value				
BrowseName	OperationType				
IsAbstract	False				
References	Node Class	BrowseName	Data Type	Type Definition	Other
Subtype of 0:BaseObjectType defined in OPC UA Part 5					
0:HasProperty	Variable	DeviceMappingNumber	0:UInt32	0:PropertyType	M, RW
0:HasComponent	Method	IdentifyDevice			O
0:HasProperty	Variable	HighestActiveAlarmSeverity	0:UInt16	0:PropertyType	M, RO
0:HasComponent	Variable	ActiveErrors	3:ClassifiedActiveErrorDataType[]	0:BaseDataVariableType	M, RO
0:HasComponent	Method	ResetAllErrors			O
0:HasComponent	Method	ResetErrorById			O
0:HasComponent	Method	SetCycleNumber			O
0:HasProperty	Variable	MaterialBalanceSystemType	MaterialBalanceSystemType Enumeration	0:PropertyType	M, RO
0:HasProperty	Variable	ActivateMaterialBalanceSystem	0:Boolean	0:PropertyType	O, RW
0:HasComponent	Variable	DeliveryType	0:UInt16	0:MultiStateValueDiscreteType	M, RW
0:HasComponent	Object	DeliveryPressure		3:ControlledParameterType	O
0:HasComponent	Variable	DeliveryPressureMeasuringPoint	0:UInt16	0:MultiStateValueDiscreteType	O, RW
0:HasComponent	Object	DeliveryFlowrate		3:ControlledParameterType	O
0:HasComponent	Variable	ActualShotWeight	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	SetShotWeight	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	SetValueCompositeDensity	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	MixingRatioTarget	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	MaxDeviationMixingRatio	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	TargetDeviationMixingRatio	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	ActualDeviationMixingRatio	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	RemainingMaterialTime	0:Duration	0:BaseDataVariableType	O, RO
0:HasComponent	Variable	PurgeMode	0:UInt16	0:MultiStateValueDiscreteType	O, RW
0:HasProperty	Variable	PurgeStatus	PurgeStatus Enumeration	0:PropertyType	O, RO
0:HasComponent	Variable	PurgeQuantity	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	PurgeTimeout	0:Duration	0:BaseDataVariableType	O, RW
0:HasComponent	Variable	PurgeCyclicQuantity	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	PurgeCyclicIdleTime	0:Duration	0:BaseDataVariableType	O, RW
0:HasComponent	Variable	PurgeCyclicActive	0:Boolean	0:BaseDataVariableType	O, RO
0:HasComponent	Variable	ActivateRemoteControl	0:UInt16	0:MultiStateValueDiscreteType	M, RW
0:HasComponent	Variable	RemoteControlActivated	0:UInt16	0:MultiStateValueDiscreteType	M, RO
0:HasComponent	Method	StartDosing			O
0:HasComponent	Method	StopDosing			O
0:HasComponent	Variable	DosingActive	0:Boolean	0:BaseDataVariableType	O, RO
0:HasComponent	Object	Component_A		ComponentType	M
0:HasComponent	Object	Component_B		ComponentType	M
0:HasComponent	Object	Additive_<Y>		AdditiveType	OP
0:GeneratesEvent	ObjectType	LDSCycleParametersEventType	Defined in 9.29		
Conformance Units					
OPC 40082-3 Basic					
OPC 40082-3 DosingFunction					
OPC 40082-3 Purge					
OPC 40082-3 PurgeCyclic					
OPC 40082-3 SelectableMaterialBalanceSystem					

OPC 40082-3 DeliveryPressure
OPC 40082-3 DeliveryFlowrate
OPC 40082-3 MixingRatioTarget
OPC 40082-3 BalanceSystem
OPC 40082-3 Identify Device
OPC 40082-3 ResetAllErrors
OPC 40082-3 ResetErrorById
OPC 40082-3 SetCycleNumber
OPC 40082-3 ActualShotWeight
OPC 40082-3 SetShotWeight
OPC 40082-3 SetValueCompositeDensity
OPC 40082-3 RemainingMaterialTime
OPC 40082-3 Additive

The *BrowseName* of *ComponentType* shall be built of “Component\_” and a character ‘A’, ‘B’ , ... (e.g. Component\_A, Component\_B).

The *BrowseName* of *AdditiveType* shall be built of “Additive\_” and a number from 1 to n (e.g. Additive\_1).

### 9.1 DeviceMappingNumber

**Description:** Unique identifier/address/number for devices of the same *DeviceType* within a local network. Several peripheral devices of the same *DeviceType* can be connected to an IMM. In most applications, the IMM must map the connected peripheral devices to internal logical devices and zones in a fixed configuration (e.g. hot runner systems according to the wiring or temperature control devices according to the tubing).

The mapping shall be stable after reconnecting the devices and is therefore not possible via IP addresses, which can be assigned dynamically via DHCP. *DeviceMappingNumber* sets the mapping order of peripheral devices of the same type on the local network and is therefore of type *UInt32*.

**Example:** 1

### 9.2 IdentifyDevice

**Description:** The peripheral device on which this method is called shows itself by e.g. activation of a LED.

**Signature:**

```
IdentifyDevice ();
```

The method has no *Input-* or *OutputArguments*.

**Table 4 – IdentifyDevice Method AddressSpace Definition**

Attribute	Value				
BrowseName	IdentifyDevice				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule

### 9.3 HighestActiveAlarmSeverity

**Description:** Indication of the severity of the highest active alarm (0 = no active alarm – 1000 = possible error). It provides a minimal error handling for devices without alarm support. However, the variable shall be filled even if alarms are supported.

**Example:** 400

### 9.4 ActiveErrors

**Description:** List of the active errors of the device. It provides a minimal error handling for devices without alarm support. However, the variable shall be filled even if alarms are supported. The *ClassifiedActiveErrorDataType* is defined in OPC 40083. If there is no active error, the array is empty.

## 9.5 ResetAllErrors

Description: Method to reset all errors on the device.

### Signature:

```
ResetAllErrors();
```

The method has no *Input-* or *OutputArguments*.

**Table 5 – ResetAllErrors Method AddressSpace Definition**

Attribute	Value				
BrowseName	ResetAllErrors				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule



## 9.6 ResetErrorById

Description: Method to reset one error of the device.

Signature:

```
ResetErrorById(
    [in]    0:String          Id);
```

**Table 6 – ResetErrorById Method Arguments**

Argument	Description
Id	Id of the error, listed in <i>ActiveErrors</i> , that shall be reset.

**Table 7 – ResetErrorById Method AddressSpace Definition**

Attribute	Value				
BrowseName	ResetErrorById				
References	Node Class	BrowseName	Data Type	Type Definition	Modelling Rule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

## 9.7 SetCycleNumber

Description: Method to set the cycle number of the LDS to synchronize it with the cycle number of the injection moulding machine.

Signature:

```
SetCycleNumber(
    [in]    0:UInt64          CycleNumber);
```

**Table 8 – SetCycleNumber Method Arguments**

Argument	Description
CycleNumber	Number, to which the cycle counter of the LDS shall be set. The next <i>LDSCycleParametersEvent</i> will use this value.

**Table 9 – SetCycleNumber Method AddressSpace Definition**

Attribute	Value				
BrowseName	SetCycleNumber				
References	Node Class	BrowseName	Data Type	Type Definition	Modelling Rule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

## 9.8 MaterialBalanceSystemType

Type of the material balance system.

**Table 10 – MaterialBalanceSystemTypeEnumeration**

Name	Value	Description
NOT_AVAILABLE	0	No material balance system available on the LDS. <i>ActivateMaterialBalanceSystem</i> is not present, because it is not possible to switch a material balance system on
ALWAYS_ACTIVE	1	Material balance system is available on the LDS and is always active. <i>ActivateMaterialBalanceSystem</i> is not present, because it is not possible to switch a material balance system off
SELECTABLE	2	Material balance system is available on the LDS and it can be switched on and off via the interface via the variable <i>ActivateMaterialBalanceSystem</i> .

## 9.9 ActivateMaterialBalanceSystem

If the value is true, the material balance system is activated.

### 9.10 DeliveryType

The dosing system works with delivery pressure or volumetric flow. As some LSR dosing systems support the selection of the *DeliveryType*, the *Property* can be writeable. Therefore, the *TypeDefinition* is *MultiStateValueDiscreteType*, so the *Properties EnumValues* and *ValueAsText* must be filled with the supported values out of Table 11.

**Table 11 – Values for DeliveryType**

EnumValue	ValueAsText	Description
0	PRESSURE	Dosing system with delivery pressure
1	VOLUMETRIC_FLOWRATE	Dosing system with volumetric flow

A server can provide manufacturer specific values with *EnumValues* ≥ 100.

### 9.11 DeliveryPressure, DeliveryPressureMeasuringPoint

With the objects *DeliveryPressure* and *DeliveryPressureMeasuringPoint* the client can set (and monitor) the delivery pressure of the LDS. Both are optional, but the two elements shall always be used together.

For systems with *DeliveryPressure* the components *ActualValue*, *SetValue*, *UpperTolerance* and *LowerTolerance* defined in the *ControlledParameterType* are mandatory. If the upper or lower tolerance band is passed it is documented in the *ErrorStatus*.

Unit: bar or psi (=lbf/in<sup>2</sup>)

The variable *DeliveryPressureMeasuringPoint* represents the position of the pressure sensor used for the *DeliveryPressure*. As some LSR dosing systems support the selection of the position, the *Property* can be writeable. Therefore, the *TypeDefinition* is *MultiStateValueDiscreteType*, so the *Properties EnumValues* and *ValueAsText* must be filled with the supported values out of Table 12.

**Table 12 – Values for PressureMeasuringPoint**

EnumValue	ValueAsText	Description
0	PUMP_A	Pressure sensor position pump A
1	PUMP_B	Pressure sensor position pump B
2	BLENDER	Pressure sensor position blender
3	MANUAL	Pressure is manually adjusted

A server can provide manufacturer specific values with *EnumValues* ≥ 100.

NOTE: The actual pressure for each component (for monitoring) is included in the *ComponentType* and the cyclic events.

### 9.12 DeliveryFlowrate

For system with delivery volumetric flow rate the components *ActualValue*, *SetValue*, *UpperTolerance* and *LowerTolerance* are mandatory. If the upper or lower tolerance band is passed it is documented in the *ErrorStatus*.

Unit: l/h or gal/h

### 9.13 ActualShotWeight

Specifies the value determined by the feeder as the shot weight.

Unit: g or lb

### 9.14 SetShotWeight

Reference value determined by the IMM or defined by the user on the IMM side.

Unit: g or lb

### 9.15 SetValueCompositeDensity

The composite set point of density.

Unit: g/cm<sup>3</sup> or lb/in<sup>3</sup>

### 9.16 **MixingRatioTarget**

Target of the mixing ratio (includes ratio change when MaterialBalanceSystem is active). The share of component A (in percent) defines the value:

Examples: 50 (A 50 : 50 B) → without MaterialBalanceSystem

51,25 (A 51,25 : 48,75 B) → active MaterialBalanceSystem

### 9.17 **MaxDeviationMixingRatio, TargetDeviationMixingRatio, ActualDeviationMixingRatio**

If a material balance system is used these variables are used to set and monitor the deviation from the set mixing ratio of component A and B.

*MaxDeviationMixingRatio* is writeable by the client and used to limit the maximum deviation in percent.

*TargetDeviationMixingRatio*: This deviation (in percent) is set/used by the material balance system

*ActualDeviationMixingRatio*: Actual deviation (in percent)

The values are given related to the mixing ratio of component A. If the maximum allowed mixing ratio is 51% component A and 49% component B *MaxDeviationMixingRatio* is 1%.

### 9.18 **RemainingMaterialTime**

Remaining time until first material is empty.

### 9.19 PurgeMode

Purge functions can be activated directly when the *PurgeMode* is selected on the LDS. Each device is allowed to set the *PurgeMode*. When in remote control and purging by the IMM is activated with a hard wired dosing signal, *PurgeTimeout* and *PurgeQuantity* has no effect.


When in remote control and purging by the IMM is activated with the StartDosing Method, either *PurgeTimeout/PurgeCyclicIdleTime* or *PurgeQuantity/PurgeCyclicQuantity* must be set.

After the dosing signal is deactivated again, the *PurgeMode* will be reset to OFF by the LDS.

**Table 13 – Values for PurgeMode**

EnumValue	ValueAsText	Description
0	OFF	No purge function. Normal dosing via dosing signal.
1	WITH_COMPONENT_A	Purge A
2	WITH_COMPONENT_B	Purge B
3	WITH_COMPONENT_A_B	Venting
4	WITH_COMPONENT_A_OR_B	System chooses the component which is used for purging (usually the component with the larger remaining quantity)
5	CYCLIC_COMPONENT_A_B	Purge A and B cyclic

Figure 3 shows the interactions between *ActivateRemoteControl*, *RemoteControlActivated*, *PurgeMode*, *PurgeStatus* and the dosing signal.

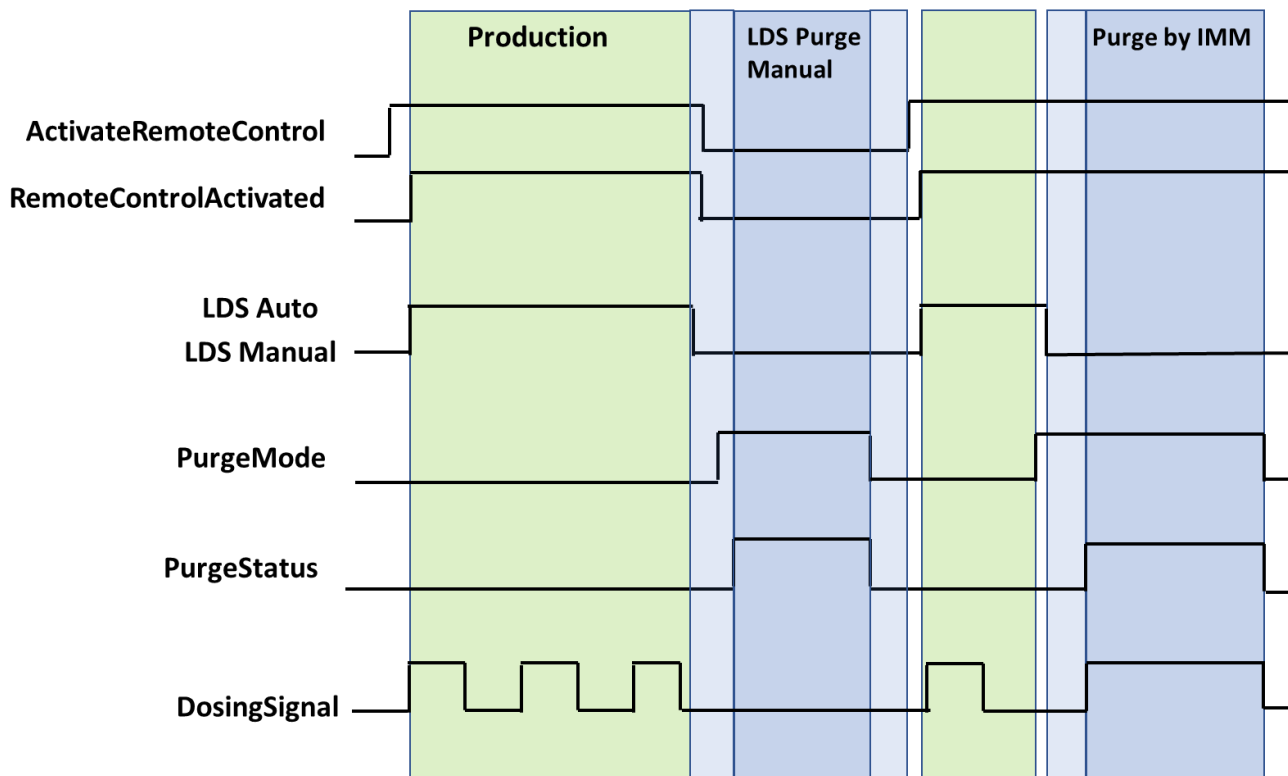

**Figure 3 – Purge Scenario**

Note: “LDS Auto” and “LDS Manual” are LDS internal parameters which are not covered by this specification.

### 9.20 PurgeStatus

Actual status of the purge function. *PurgeStatus* must show OFF if no purge function is active. The *PurgeStatus* is also shown in Figure 3.

**Table 14 – PurgeStatusEnumeration**

Name	Value	Description
OFF	0	No purge function is active.
COMPONENT_A	1	Purge component A is active.
COMPONENT_B	2	Purge component B is active.
COMPONENT_A_AND_B	3	Venting
COMPONENT_A_AND_B_CYCLIC	4	Cyclic purge component A and B is active.

**9.21 PurgeQuantity**

The *PurgeQuantity* is only used in relation with *PurgeMode* EnumValue 1-4 and describes the amount of material during the active purge mode.

Unit: cm<sup>3</sup> or in<sup>3</sup>

**9.22 PurgeTimeout**

*PurgeTimeout* describes the maximum time of the active *PurgeMode* (1-5). For *PurgeMode* EnumValue 1-4, the *PurgeMode* is set to 0 after the *PurgeTimeout* has expired. For *PurgeMode* EnumValue 5, the *PurgeCyclicActive* is set to false, *PurgeMode* is unaffected.

**9.23 PurgeCyclicQuantity**

The *PurgeCyclicQuantity* is only used in relation with *PurgeMode* EnumValue 5 and describes the amount of material during a purge cycle as the sum of both components. After the volume is reached, the variable *PurgeCyclicActive* will become false and *PurgeCyclicIdleTime* starts.

Unit: cm<sup>3</sup> or in<sup>3</sup>

**9.24 PurgeCyclicIdleTime**

The *PurgeCyclicIdleTime* is only used in relation with *PurgeMode* EnumValue 5 and describes the time until the next purge cycle starts.

**9.25 PurgeCyclicActive**

*PurgeCyclicActive* is only used in relation with *PurgeMode* EnumValue 5 and indicates the difference between purging (true) and waiting (false)

### 9.26 ActivateRemoteControl

It is necessary to synchronize the dosing between IMM and LSR dosing systems. This can be done via a separate interface e.g. via hardwired signals or also via OPC UA (if the process is robust against small time delays that can be caused by the client/server-connection). Signal 0 can be set by IMM or LDS, signals > 0 only by IMM.

With *ActivateRemoteControl* the client selects the method of remote control. If the server provides only one method for remote control, the other one is not listed in the possible values of the *MultiStateValueDiscreteType*.

**Table 15 – Values for ActivateRemoteControl and RemoteControlActivated**

EnumValue	ValueAsText	Description
0	OFF	Remote control / automatic mode switched off.
1	SEPARATE_INTERFACE	Activating automatic mode on LDS and using a separate interface from the injection moulding machine for remote control
2	OPC_UA	Activating automatic mode on LDS and using this OPC UA connection with the methods StartDosing/StopDosing for remote control

A server can provide manufacturer specific values with *EnumValues* ≥ 100.

Figure 3 shows the interaction between *ActivateRemoteControl* and *RemoteControlActivated*.

### 9.27 RemoteControlActivated

With this signal, the LDS signals, if it is ready to be controlled via this or a separate interface. See Table 15 for possible values.

Figure 3 shows the interaction between *ActivateRemoteControl* and *RemoteControlActivated*.

### 9.28 StartDosing, StopDosing, DosingActive

Description: If *RemoteControlActivated* = 2, the two *Methods* (without arguments) are used to start and stop the dosing. With the Variable *DosingActive* the LDS can inform the IMM, if dosing is really active.

NOTE: The dosing can also be stopped by the LDS itself (e.g. when SetShotWeight has been reached) to avoid everlasting dosing when the client does not call the method StopDosing.

#### Signatures:

```
StartDosing();
StopDosing();
```

The methods have no *Input-* or *OutputArguments*.

**Table 16 – StartDosing Method AddressSpace Definition**

Attribute	Value				
BrowseName	StartDosing				
References	Node Class	BrowseName	Data Type	Type Definition	Modelling Rule

**Table 17 – StopDosing Method AddressSpace Definition**

Attribute	Value				
BrowseName	StopDosing				
References	Node Class	BrowseName	Data Type	Type Definition	Modelling Rule

### 9.29 LDSCycleParametersEventType

The *LDSCycleParametersEventType* represents information on a dosing cycle. A complete dosing is defined from the beginning of the dosing signal to the next one, i.e. the event for cycle n is fired, when the dosing signal for cycle n+1 starts. After the last cycle the event must be raised after a timeout which corresponds to the cycle time.

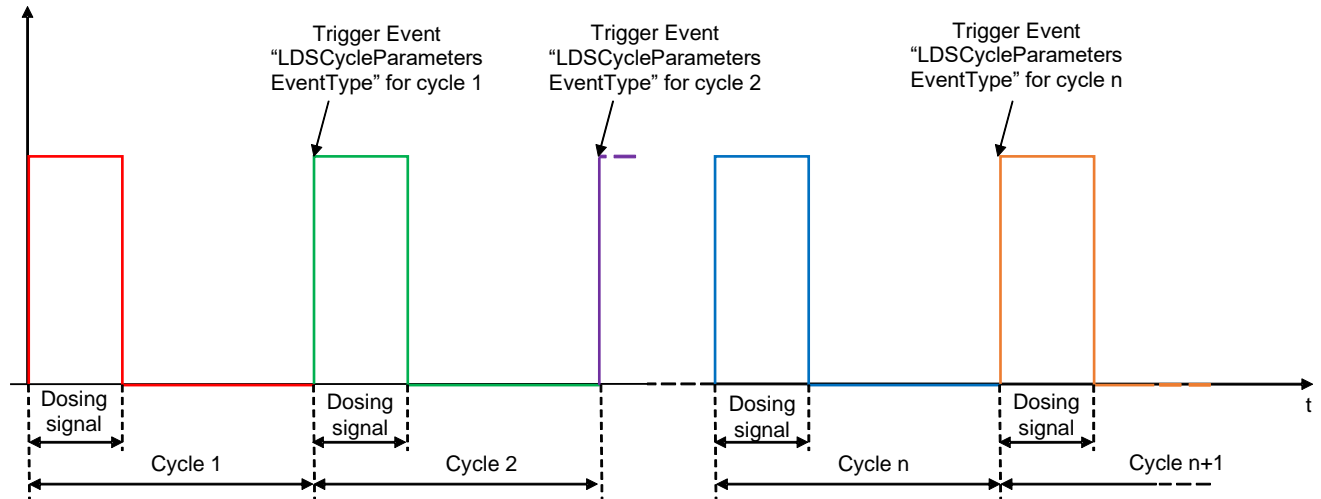


Figure 4 – Timing of LDSCycleParametersEventType

Note: The event data refer to the current injected material and not to the current dosing process (1 cycle offset).

The *LDSCycleParametersEventType* is formally defined in Table 18.

Table 18 – LDSCycleParametersEventType Definition

Attribute	Value				
BrowserName	LDSCycleParametersEventType				
IsAbstract	True				
References	Node Class	BrowserName	Data Type	Type Definition	Other
Subtype of 0:BaseEventType defined in OPC UA Part 5					
0:HasProperty	Variable	CycleNumber	0:UInt64	0:PropertyType	M
0:HasProperty	Variable	DosingTime	0:Duration	0:PropertyType	O
0:HasComponent	Variable	MixingRatioTarget	0:Double	0:AnalogItem	O
0:HasComponent	Variable	MixingRatioActual	0:Double	0:AnalogItem	O
0:HasComponent	Variable	AdditivesRatioTarget	0:Double[]	0:AnalogItem	O
0:HasComponent	Variable	AdditivesRatioActual	0:Double[]	0:AnalogItem	O
0:HasComponent	Variable	VolumeA	0:Double	0:AnalogItem	O
0:HasComponent	Variable	VolumeB	0:Double	0:AnalogItem	O
0:HasComponent	Variable	VolumeAB	0:Double	0:AnalogItem	O
0:HasComponent	Variable	VolumeAdditives	0:Double[]	0:AnalogItem	O
0:HasComponent	Variable	VolumeTotal	0:Double	0:AnalogItem	O
0:HasComponent	Variable	ResidualAmountA	0:Double	0:AnalogItem	O
0:HasComponent	Variable	ResidualAmountB	0:Double	0:AnalogItem	O
0:HasComponent	Variable	MixingPointPressureA	0:Double	0:AnalogItem	O
0:HasComponent	Variable	MixingPointPressureB	0:Double	0:AnalogItem	O
0:HasComponent	Variable	MixingPointPressureBlender	0:Double	0:AnalogItem	O
0:HasComponent	Variable	AdditivesPressure	0:Double[]	0:AnalogItem	O
0:HasComponent	Variable	FilterPressurePrimary	0:Double	0:AnalogItem	O
0:HasComponent	Variable	FilterPressureSecondary	0:Double	0:AnalogItem	O

#### 9.29.1 CycleNumber

Number of the dosing cycle. Gets counted up after each dosing cycle. The value can be set by calling the method *SetCycleNumber*. It is recommended to synchronize CycleNumber after a reconnection by calling this method.

Example: 900

### 9.29.2 DosingTime

Duration of the dosing cycle.

### 9.29.3 MixingRatioTarget

Target mixing ratio of the last cycle (includes ratio change when MaterialBalanceSystem is active). The share of component A (in percent) defines the value:

Examples: 50 (A 50 : 50 B) → without MaterialBalanceSystem  
51,25 (A 51,25 : 48,75 B) → active MaterialBalanceSystem

### 9.29.4 MixingRatioActual

Actual mixing ratio of the components. The share of component A defines the value:

Example: 50,9 (A 50,9 : 49,1 B)

### 9.29.5 AdditivesRatioTarget

Target ratios of additives in percentage which are set in AdditiveFraction of AdditiveType.

### 9.29.6 AdditivesRatioActual

Actual ratios of additives in percentage.

Example: [ 2,1 % ; 1,2 % ]

### 9.29.7 VolumeA

Volume of component A that was added to the process in the last cycle.

Unit: cm<sup>3</sup> or in<sup>3</sup>

### 9.29.8 VolumeB

Volume of component B that was added to the process in the last cycle.

Unit: cm<sup>3</sup> or in<sup>3</sup>

### 9.29.9 VolumeAB

Volume of components A + B that was added to the process in the last cycle.

Unit: cm<sup>3</sup> or in<sup>3</sup>

### 9.29.10 VolumeAdditives

Volumes of the additives that were added to the process in the last cycle.

Unit: cm<sup>3</sup> or in<sup>3</sup>

### 9.29.11 VolumeTotal

Volume of all components (A + B + all additives).

Unit: cm<sup>3</sup> or in<sup>3</sup>

### 9.29.12 ResidualAmountA

Residual weight amount of component A at the end of the dosing cycle.

Unit: kg or lb

### 9.29.13 ResidualAmountB

Residual weight amount of component B at the end of the dosing cycle.

Unit: kg or lb



**9.29.14 MixingPointPressureA**

Average pressure of component A during the last cycle at the blender.

Unit: bar or psi

**9.29.15 MixingPointPressureB**

Average pressure of component B during the last cycle at the blender.

Unit: bar or psi

**9.29.16 MixingPointPressureBlender**

Average pressure of components A and B during the last cycle at the blender.

Unit: bar or psi

**9.29.17 AdditivesPressure**

Average pressure of the additive during the last cycle at the measuring point.

Unit: bar or psi

**9.29.18 FilterPressurePrimary, FilterPressureSecondary**

Average material pressure during the last cycle before and after the filter. The Pressure difference between FilterPressurePrimary & FilterPressureSecondary can be used to check if the filter is blocked/ will be blocked soon/ has to be maintained. Unit: bar or psi

**10 ComponentType**

This *ObjectType* contains information about the mixing components A and B. It is formally defined in Table 19.

**Table 19 – ComponentType Definition**

Attribute	Value				
BrowseName	ComponentType				
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Other
Subtype of 0:BaseObjectType defined in OPC UA Part 5					
0:HasComponent	Variable	SetValueDensity	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Method	SetSetValueDensity			O
0:HasComponent	Variable	ActualPressure	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	ActualFollowerPlatePressure	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	SetFollowerPlatePressure	0:Double	0:AnalogItemType	O, RW
0:HasComponent	Variable	DrumCapacity	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	ResidualAmount	0:Double	0:AnalogItemType	O, RO
0:HasComponent	Variable	RemainingMaterialTime	0:Duration	0:BaseDataVariableType	O, RO
0:HasProperty	Variable	AllowsCycles	0:Double	0:PropertyType	O, RO
0:HasProperty	Variable	Status	ComponentStatus Enumeration	0:PropertyType	M, RO
<b>Conformance Units</b>					
OPC 40082-3 Basic					
OPC 40082-3 SetValueDensity					
OPC 40082-3 SetSetValueDensity					
OPC 40082-3 ActualPressure					
OPC 40082-3 ActualFollowerPlatePressure					
OPC 40082-3 SetFollowerPlatePressure					
OPC 40082-3 DrumCapacity					
OPC 40082-3 ResidualAmount					
OPC 40082-3 RemainingMaterialTime					
OPC 40082-3 AllowsCycles					

### 10.1 SetValueDensity

Set point material density.

Unit: g/cm<sup>3</sup> or lb/in<sup>3</sup>

### 10.2 SetSetValueDensity

This optional method is used to modify *SetValueDensity* if allowed by the device.

**Signature:**

```
SetSetValueDensity (
    [in]    0:Double    Density);
```

**Table 20 – SetSetValueDensity Method Arguments**

Argument	Description
Density	New set point of the material density. Note: The <i>DataType</i> is Double. The unit is specified in the Variable <i>SetValueDensity</i> .

**Table 21 – SetSetValueDensity Method AddressSpace Definition**

Attribute	Value				
BrowseName	SetSetValueDensity				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

### 10.3 ActualPressure

Actual pressure of the component (between drum and blender measured after the pump).

Unit: bar or psi

### 10.4 ActualFollowerPlatePressure

Actual material pressure under the follower plate (e.g. calculated by the pressure transmission ratio of pneumatics cylinder to follower plate).

Unit: bar or psi

### 10.5 SetFollowerPlatePressure

Set value for material pressure under the follower plate (e.g. calculated by the pressure transmission ratio of pneumatics cylinder to follower plate).

Unit: bar or psi

### 10.6 DrumCapacity

Maximum capacity of the drum (typically 20 or 200 l).

Unit: l or gal

### 10.7 ResidualAmount

Residual amount of the material.

Unit: kg or lb

### 10.8 RemainingMaterialTime

Time until the material of the component is empty.

### 10.9 AllowsCycles

Expected number of remaining cycles with the current drum.

### 10.10 Status

Actual status of the component provides a minimal error handling for devices without event support.

Detailed information may be published via *ComponentAlarmType*.

**Table 22 – ComponentStatusEnumeration**

Name	Value	Description
GOOD	0	Component has no error or warning.
WARNING	1	The component has an undefined warning, but no need to stop the production. Detailed information may be published via an alarm ( <i>HelpOffNormalAlarmType</i> ).
WARNING_PRESSURE_TOO_HIGH	2	Pressure is too high. No need to stop the process but influence to the part quality.
WARNING_PRESSURE_TOO_LOW	3	Pressure is too low. No need to stop the process but influence to the part quality.
ADVANCE_WARNING_DRUM_CHANGE	4	Warning, barrel change is imminent. No need to stop the process.
ERROR_DRUM_EMPTY	5	Drum of the component is empty. Production needs to be stopped.
ERROR	6	The component has an error and process needs to be stopped. Detailed information may be published via an alarm ( <i>HelpOffNormalAlarmType</i> ).

## 11 AdditiveType

This *ObjectType* contains information about used additives. It is formally defined in Table 23.

**Table 23 – AdditiveType Definition**

Attribute	Value				
BrowseName	AdditiveType				
IsAbstract	False				
References	Node Class	BrowseName	Data Type	Type Definition	Other
Subtype of 0:BaseObjectType defined in OPC UA Part 5					
0:HasProperty	Variable	IsPresent	0:Boolean	0:PropertyType	M, RO
0:HasProperty	Variable	ActivateAdditive	0:Boolean	0:PropertyType	M, RW
0:HasProperty	Variable	AdditiveActivated	0:Boolean	0:PropertyType	M, RO
0:HasProperty	Variable	Status	AdditiveStatus Enumeration	0:PropertyType	M, RO
0:HasComponent	Object	AdditiveFraction		3:ControlledParameterType	O
0:HasComponent	Object	AdditiveStrokeVolume		3:ControlledParameterType	O
0:HasProperty	Variable	ActivateClosedLoopControl	0:Boolean	0:PropertyType	O, RW
0:HasProperty	Variable	ClosedLoopControlActivated	0:Boolean	0:PropertyType	O, RO
ConformanceUnits					
OPC 40082-3 AdditiveClosedLoopControl					
OPC 40082-3 AdditiveFraction					
OPC 40082-3 AdditiveStrokeVolume					

### 11.1 IsPresent

This *Property* informs the client if the additive is physically present. May be FALSE e.g. if the server does not create dynamically instances and has a fixed number of instances for the additives out of which some are currently not used.

### 11.2 ActivateAdditive

Set value to activate the additive.

### 11.3 AdditiveActivated

Is *true* if the additive is activated.

### 11.4 Status

Actual status of the additive provides a minimal error handling for devices without event support.

Detailed information may be published via *AdditiveAlarmType*.

**Table 24 – AdditiveStatusEnumeration**

Name	Value	Description
GOOD	0	Additive has no error or warning
WARNING	1	The additive has an undefined warning, but no need to stop the production. Detailed information may be published via an alarm ( <i>HelpOffNormalAlarmType</i> ).
ADVANCE_WARNING_ADDITIVE_CHANGE	2	Warning, additive change is imminent. No need to stop the process.
ERROR_EMPTY	3	Error, the additive is empty. Production needs to be stopped.
ERROR	4	The additive has an error and process needs to be stopped. Detailed information may be published via an alarm ( <i>HelpOffNormalAlarmType</i> ).

### 11.5 AdditiveFraction

Contains the *SetValue*, *ActualValue*, *LowerTolerance* and *UpperTolerance* of the additive fraction in percent.

### 11.6 AdditiveStrokeVolume

Defines the value of additive per shot/stroke. Total amount stays the same (defined by *AdditiveFraction*). Used to distribute the total amount to several strokes.

Unit: mm<sup>3</sup> or in<sup>3</sup>

### 11.7 ActivateClosedLoopControl

Activate the closed loop control of the additive.

### 11.8 ClosedLoopControlActivated

Is *false* if the closed loop control of the additive is not activated. In this case the *ActualValues* of *AdditiveFraction* and *AdditiveVolume* are equal to the *SetValues*.

Is *true* if the closed loop control of the additive is activated. In this case, the *ActualValues* of *AdditiveFraction* and *AdditiveVolume* are the measured values.

## 12 Alarmmanagement

As defined in OPC 40083, the root node of the specific interface, e.g. an instance of *LDS\_InterfaceType*, sets the *SubscribeToEvents* flag in the *EventNotifier* attribute.

The client subscribes to events at this root node and receives the events already defined in this specification, such as temperature limit alarms or diagnostic events.

An LDS may optionally generate additional manufacturer-specific alarms, warnings or information displayed on the user interface of the device and can publish these events via two special *AlarmTypes*.

Component-related messages should be represented by instances of *ComponentAlarmType*, additive-related messages should be represented by instances of *AdditiveAlarmType*, other device information is of type *HelpOffNormalAlarmType*.

All are subtypes of *OffNormalAlarmType*, can be synchronized via *ConditionRefresh* and contain a *Severity* for error handling according to OPC 40083.

### 12.1 ComponentAlarmType

The *ComponentAlarmType* represent component-related text messages (alarms, error messages, warnings, information) of the peripheral device and is a subtype of *HelpOffNormalAlarmType* as defined in OPC 40083.

NOTE: For messages related to the whole device, the *HelpOffNormalAlarmType* shall be used.

**Table 25 – ComponentAlarmType Definition**

Attribute	Value				
BrowseName	ComponentAlarmType				
IsAbstract	False				
References	Node Class	BrowseName	Data Type	Type Definition	Modelling Rule
Subtype of 3: <i>HelpOffNormalAlarmType</i> defined in OPC 40083					
Conformance Units					
OPC 40082-3 Alarms					

The *SourceNode* (included in *BaseEventType*) shall contain the *NodeId* of the related component. In case of medium or high severity, the IMM can sort out bad parts or stop production.

## 12.2 AdditiveAlarmType

The *AdditiveAlarmType* represents additive-related text messages (alarms, error messages, warnings, information) of the peripheral device and is a subtype of *HelpOffNormalAlarmType*.

**Table 26 – AdditiveAlarmType Definition**

Attribute	Value				
BrowseName	AdditiveAlarmType				
IsAbstract	False				
References	Node Class	BrowseName	Data Type	Type Definition	Other
Subtype of 3: <i>HelpOffNormalAlarmType</i> defined in OPC 40083					
Conformance Units					
OPC 40082-3 Alarms					

The *SourceNode* (included in *BaseEventType*) shall contain the *NodeId* of the related additive. In case of medium or high severity, the IMM can sort out bad parts or stop production.

## 13 Profiles and Conformance Units

This chapter defines the corresponding profiles and conformance units for the OPC UA Information Model for OPC 40082-3. *Profiles* are named groupings of conformance units. Facets are profiles that will be combined with other *Profiles* to define the complete functionality of an OPC UA *Server* or *Client*.

### 13.1 Conformance Units

This chapter defines the corresponding *Conformance Unit* for OPC 40082-3.

**Table 27 – Conformance Units for OPC 40082-3**

Category	Title	Description
Server	OPC 40082-3 Basic	Support of <i>LDS_InterfaceType</i> and all mandatory child elements giving information on the LDS and its status. There is at least one instance of the <i>LDS_InterfaceType</i> in the <i>Machines Object</i> .
Server	OPC 40082-3 Alarms	Support of <i>HelpOffNormalAlarmType</i> , <i>ComponentAlarmType</i> and <i>AdditiveAlarmType</i> providing error information. If this facet is supported and a client subscribes to the events, the server shall provide all errors via alarms in addition to the error variables included in the <i>OperationType</i>
Server	OPC 40083 Tolerances	Support of <i>Status</i> , <i>UpperTolerance</i> and <i>LowerTolerance</i> in the <i>MonitoredParameterType</i> and <i>ControlledParameterType</i> and the according alarms.
Server	OPC 40082-3 DosingFunction	Support of <i>StartDosing</i> , <i>StopDosing</i> and <i>DosingActive</i> in the <i>OperationType</i>
Server	OPC 40082-3 Purge	Support of <i>PurgeMode</i> , <i>PurgeStatus</i> , <i>PurgeQuantity</i> and <i>PurgeTimeout</i> in the <i>OperationType</i>
Server	OPC 40082-3 PurgeCyclic	Support of OPC 40082-3 Purge, the <i>PurgeMode CYCLIC_COMPONENT_A_B</i> and <i>PurgeCyclicQuantity</i> , <i>PurgeCyclicIdleTime</i> , <i>PurgeCyclicActive</i> in the <i>OperationType</i>
Server	OPC 40082-3 SelectableMaterialBalanceSystem	If <i>SELECTABLE</i> is supported in the <i>MaterialBalanceSystemTypeEnumeration</i> , the variable <i>ActivateMaterialBalanceSystem</i> has to be supported.
Server	OPC 40082-3 DeliveryPressure	If <i>DeliveryType PRESSURE</i> is supported, <i>DeliveryPressure</i> and <i>DeliveryPressureMeasuringPoint</i> have to be supported
Server	OPC 40082-3 Flowrate	If <i>DeliveryType VOLUMETRIC_FLOWRATE</i> is supported, <i>DeliveryFlowRate</i> has to be supported
Server	OPC 40082-3 MixingRatioTarget	If a Material balance system is used, <i>MixingRatioTarget</i> has to be supported
Server	OPC 40082-3 BalanceSystem	If a Material balance system is used, <i>MaxDeviationMixingRatio</i> , <i>TargetDeviationMixingRatio</i> , <i>ActualDeviationMixingRatio</i> have to be supported.
Server	OPC 40082-3 Identify Device	Support of the <i>IdentifyDevice Method</i> in the <i>OperationType</i>
Server	OPC 40082-3 ResetAllErrors	Support of the <i>ResetAllErrors Method</i> in the <i>OperationType</i>
Server	OPC 40082-3 ResetErrorById	Support of the <i>ResetErrorById Method</i> in the <i>OperationType</i>
Server	OPC 40082-3 SetCycleNumber	Support of the <i>SetCycleNumber Method</i> in the <i>OperationType</i>
Server	OPC 40082-3 ActualShotWeight	Support of the <i>ActualShotWeight Variable</i> in the <i>OperationType</i>
Server	OPC 40082-3 SetShotWeight	Support of the <i>SetShotWeight Variable</i> in the <i>OperationType</i>
Server	OPC 40082-3 SetValueCompositeDensity	Support of the <i>SetValueCompositeDensity Variable</i> in the <i>OperationType</i>
Server	OPC 40082-3 RemainingMaterialTime	Support of the <i>RemainingMaterialTime Variable</i> in the <i>OperationType</i>
Server	OPC 40082-3 Additive	Support of the <i>AdditiveType</i> with all its mandatory child elements
Server	OPC 40082-3 SetValueDensity	Support of the <i>SetValueDensity Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 SetSetValueDensity	Support of the <i>SetSetValueDensity Method</i> and the <i>SetValueDensity Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 ActualPressure	Support of the <i>ActualPressure Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 ActualFollowerPlatePressure	Support of the <i>ActualFollowerPlatePressure Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 SetFollowerPlatePressure	Support of the <i>SetFollowerPlatePressure Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 DrumCapacity	Support of the <i>DrumCapacity Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 ResidualAmount	Support of the <i>ResidualAmount Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 RemainingMaterialTime	Support of the <i>RemainingMaterialTime Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 AllowsCycles	Support of the <i>AllowsCycle Variable</i> in the <i>ComponentType</i>
Server	OPC 40082-3 AdditiveFraction	Support of <i>AdditiveFraction</i> in the <i>AdditiveType</i>
Server	OPC 40082-3 AdditiveStrokeVolume	Support of <i>AdditiveStrokeVolume</i> in the <i>AdditiveType</i>
Server	OPC 40082-3 AdditiveClosedLoopControl	Support of <i>ActivateClosedLoopControl</i> and <i>ClosedLoopControlActivated</i> in the <i>AdditiveType</i>

## 13.2 Profiles

### 13.2.1 Profile list

The following tables specify the facets available for Servers that implement the OPC 40082-3 Information Model companion specification.

NOTE: The names of the supported profiles are available in the *Server Object* under *ServerCapabilities.ServerProfileArray*

Table 28 lists all Profiles defined in this document and defines their URIs.

**Table 28 – Profile URIs for OPC 40082-3**

Profile	URI
OPC 40082-3 Basic Server Profile	<a href="http://opcfoundation.org/UA-Profile/PlasticsRubber/LDS/Server/Basic">http://opcfoundation.org/UA-Profile/PlasticsRubber/LDS/Server/Basic</a>
OPC 40082-3 Alarms Server Facet	<a href="http://opcfoundation.org/UA-Profile/PlasticsRubber/LDS/Server/Alarms">http://opcfoundation.org/UA-Profile/PlasticsRubber/LDS/Server/Alarms</a>

### 13.2.2 Server Facets

#### 13.2.2.1 Overview

The following sections specify the *Facets* available for *Servers* that implement the OPC 40082-3 companion specification. Each section defines and describes a *Facet* or *Profile*.

#### 13.2.2.2 OPC 40082-3 Basic Server Profile

**Table 29 - OPC 40082-3 Basic Server Profile**

Group	Conformance Unit / Profile Title	Mandatory / Optional
OPC 40082-3	OPC 40082-3 Basic	M
Profile	0:ComplexType Server Facet	M
Profile	0:Method Server Facet	M
Profile	2:BaseDevice Server Facet	M
OPC 40082-3	OPC 40083 Tolerances	O
OPC 40082-3	OPC 40082-3 DosingFunction	O
OPC 40082-3	OPC 40082-3 Purge	O
OPC 40082-3	OPC 40082-3 PurgeCyclic	O
OPC 40082-3	OPC 40082-3 SelectableMaterialBalanceSystem	O
OPC 40082-3	OPC 40082-3 DeliveryPressure	O
OPC 40082-3	OPC 40082-3 Flowrate	O
OPC 40082-3	OPC 40082-3 MixingRatioTarget	O
OPC 40082-3	OPC 40082-3 BalanceSystem	O
OPC 40082-3	OPC 40082-3 Identify Device	O
OPC 40082-3	OPC 40082-3 ResetAllErrors	O
OPC 40082-3	OPC 40082-3 ResetErrorById	O
OPC 40082-3	OPC 40082-3 SetCycleNumber	O
OPC 40082-3	OPC 40082-3 ActualShotWeight	O
OPC 40082-3	OPC 40082-3 SetShotWeight	O
OPC 40082-3	OPC 40082-3 SetValueCompositeDensity	O
OPC 40082-3	OPC 40082-3 RemainingMaterialTime	O
OPC 40082-3	OPC 40082-3 Additive	O
OPC 40082-3	OPC 40082-3 SetValueDensity	O
OPC 40082-3	OPC 40082-3 SetSetValueDensity	O
OPC 40082-3	OPC 40082-3 ActualPressure	O
OPC 40082-3	OPC 40082-3 ActualFollowerPlatePressure	O
OPC 40082-3	OPC 40082-3 SetFollowerPlatePressure	O
OPC 40082-3	OPC 40082-3 DrumCapacity	O
OPC 40082-3	OPC 40082-3 ResidualAmount	O
OPC 40082-3	OPC 40082-3 RemainingMaterialTime	O
OPC 40082-3	OPC 40082-3 AllowsCycles	O
OPC 40082-3	OPC 40082-3 AdditiveFraction	O
OPC 40082-3	OPC 40082-3 AdditiveStrokeVolume	O
OPC 40082-3	OPC 40082-3 AdditiveClosedLoopControl	O

**13.2.2.3 OPC 40082-3 Alarms Server Facet**

**Table 30 - OPC 40082-3 Alarms Server Facet**

Group	Conformance Unit / Profile Title	Mandatory / Optional
OPC 40082-3	OPC 40082-3 Alarms	M
Profile	0:A & C Alarm Server Facet	M

**14 Namespaces**

**14.1 Namespace Metadata**

Table 31 defines the namespace metadata for this specification. The *Object* is used to provide version information for the namespace and an indication about static *Nodes*. Static *Nodes* are identical for all *Attributes* in all *Servers*, including the *Value Attribute*. See Part 5 for more details.

The information is provided as *Object* of type *NamespaceMetadataType*. This *Object* is a component of the *Namespaces Object* that is part of the *Server Object*. The *NamespaceMetadataType Object* and its *Properties* are defined in Part 5.

The version information is also provided as part of the *ModelTableEntry* in the *UANodeSet XML* file. The *UANodeSet XML* schema is defined in Part 6.

**Table 31 – NamespaceMetadata Object for this Specification**

Attribute	Value	
<b>BrowseName</b>	http://opcfoundation.org/UA/PlasticsRubber/LDS/	
Property	Data Type	Value
NamespaceUri	String	http://opcfoundation.org/UA/PlasticsRubber/LDS/
NamespaceVersion	String	1.02.0
NamespacePublicationDate	DateTime	2025-04-01
IsNamespaceSubset	Boolean	False
StaticNodeIdsTypes	IdType []	0
StaticNumericNodeIdsRange	NumericRange []	
StaticStringNodeIdsPattern	String	

**14.2 Handling of OPC UA Namespaces**

Namespaces are used by OPC UA to create unique identifiers across different naming authorities. The *Attributes NodeId* and *BrowseName* are identifiers. A *Node* in the *UA AddressSpace* is unambiguously identified using a *NodeId*. Unlike *NodeIds*, the *BrowseName* cannot be used to unambiguously identify a *Node*. Different *Nodes* may have the same *BrowseName*. They are used to build a browse path between two *Nodes* or to define a standard *Property*.

*Servers* may often choose to use the same namespace for the *NodeId* and the *BrowseName*. However, if they want to provide a standard *Property*, its *BrowseName* shall have the namespace of the standards body although the namespace of the *NodeId* reflects something else, for example the *EngineeringUnits Property*. All *NodeIds* of *Nodes* not defined in this document shall not use the standard namespaces.

Table 32 provides a list of mandatory and optional namespaces used in an OPC 40082-3 OPC UA *Server*.



**Table 32 – Namespaces used in an OPC 40082-3 Server**

NamespaceURI	Description	Use
http://opcfoundation.org/UA/	Namespace for <i>NodeIds</i> and <i>BrowseNames</i> defined in the OPC UA specification. This namespace shall have namespace index 0.	Mandatory
Local Server URI	Namespace for nodes defined in the local server. This may include types and instances used in a device represented by the server. This namespace shall have namespace index 1.	Mandatory
http://opcfoundation.org/UA/DI/	Namespace for <i>NodeIds</i> and <i>BrowseNames</i> defined in OPC UA Part 100. The namespace index is server specific.	Mandatory
http://opcfoundation.org/UA/PlasticsRubber/GeneralTypes/	Namespace for <i>NodeIds</i> and <i>BrowseNames</i> defined in OPC 40083. The namespace index is server specific.	Mandatory
http://opcfoundation.org/UA/PlasticsRubber/LDS/	Namespace for <i>NodeIds</i> and <i>BrowseNames</i> defined in this specification. The namespace index is server specific.	Mandatory
Vendor specific types and instances	A server may provide vendor specific types like types derived from <i>MachineType</i> or <i>MachineStatusType</i> or vendor specific instances of devices in a vendor specific namespace.	Optional

Table 33 provides a list of namespaces and their index used for *BrowseNames* in this specification. The default namespace of this specification is not listed since all *BrowseNames* without prefix use this default namespace.

**Table 33 – Namespaces used in this specification**

NamespaceURI	Namespace Index	Example
http://opcfoundation.org/UA/	0	0:NodeVersion
http://opcfoundation.org/UA/DI/	2	2:DeviceClass
http://opcfoundation.org/UA/PlasticsRubber/GeneralTypes/	3	3:MachineInformationType

## **Annex A (normative)**

### **OPC 40082-3 Namespace and mappings**

#### **A.1 NodeSet and supplementary files for OPC 40082-3 Information Model**

The OPC 40082-3 *Information Model* is identified by the following URI:

<http://opcfoundation.org/UA/PlasticsRubber/LDS/>

Documentation for the NamespaceUri can be found [here](#).

The *NodeSet* associated with this version of specification can be found here:

<https://reference.opcfoundation.org/nodesets/?u=http://opcfoundation.org/UA/PlasticsRubber/LDS/&v=1.02.0&i=1>

The *NodeSet* associated with the latest version of the specification can be found here:

<https://reference.opcfoundation.org/nodesets/?u=http://opcfoundation.org/UA/PlasticsRubber/LDS/&i=1>

Supplementary files for the OPC 40082-3 *Information Model* can be found here:

<https://reference.opcfoundation.org/nodesets/?u=http://opcfoundation.org/UA/PlasticsRubber/LDS/&v=1.02.0&i=2>

The files associated with the latest version of the specification can be found here:

<https://reference.opcfoundation.org/nodesets/?u=http://opcfoundation.org/UA/PlasticsRubber/LDS/&i=2>

---